

CARTO-C LCD - TRIPTYQUE LCD CARTON



DÉMARRAGE
AUTOMATIQUE
du contenu
audio et vidéo



HAUT-PARLEURS
INTEGRÉS

 
CARACTÉRISTIQUES TECHNIQUES

Totem carton 3 faces
Ecran 15" 4/3



Grâce à leur lecteur multi-cartes, nos écrans sont compatibles SD Card, CompactFlash ou clés USB

DIMENSIONS

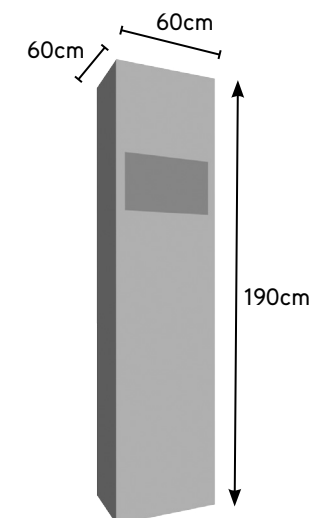

ÉCRAN LCD - CONSEILS POUR LA CRÉATION DE FICHIERS VIDÉO

CARACTÉRISTIQUES TECHNIQUES

FORMAT D'ENCODAGE

Afin d'obtenir une qualité d'affichage optimale de votre contenu vidéo sur nos écrans LCD, nous vous conseillons de respecter les paramètres d'encodage suivants.

RÉSOLUTION

Utilisez un logiciel de conversion comme AVS Video Converter sur PC : Cliquez sur MPEG1 ou AVI dans la barre de navigation puis sur 'Editer le Profil' et choisissez la résolution 720x576 pixels au format 4/3. Terminez en cliquant sur 'Convertir' après avoir défini un dossier de destination.

AUDIO

 
Si votre vidéo contient une piste audio, il est indispensable de ne pas dépasser une fréquence d'échantillonnage de 44,1 kHz en 16 bits. Les formats mono et stéréo sont supportés.

NB : Dans la mesure où vous ne pourriez pas modifier le format de votre vidéo, notre service graphique vous propose de la ré-encoder et ainsi vous assurer une qualité optimale.

CARTO-C LCD - TRIPTYQUE LCD CARTON

> Remote Control Instruction :

1. Power on/off
2. Filelist
3. Under the mode of filelist, push DISP, display the file's attribute
4. Repeat all/single file repeat/cancel repeat (default:repeat all)
5. Pause
6. Pause, back to filelist
7. REW 2x, 4x, 6x, 8x
8. FWD 2x, 4x, 6x, 8x
9. Previous
10. Next
11. Picture and music play synchronously
12. Zoom
13. Main page setting
14. Back to unit select interface
15. Mute/DE-mute
16. Voice down
17. Voice up
18. Brightness,contrast,color,color change
19. Reservation
20. Cursor up or Mirror Horizontally
21. Cursor turn left or clockwise rotate image
22. Enter
23. Cursor turn right or clockwise rotate image
24. Cursor up or Mirror Vertically
25. Digital keypad
26. Copy
27. Delete
28. AUDIO mode switch
29. Reservation
30. PROG Manual programming play list setting
31. Switch among 480P/480I/720P (default:480P)

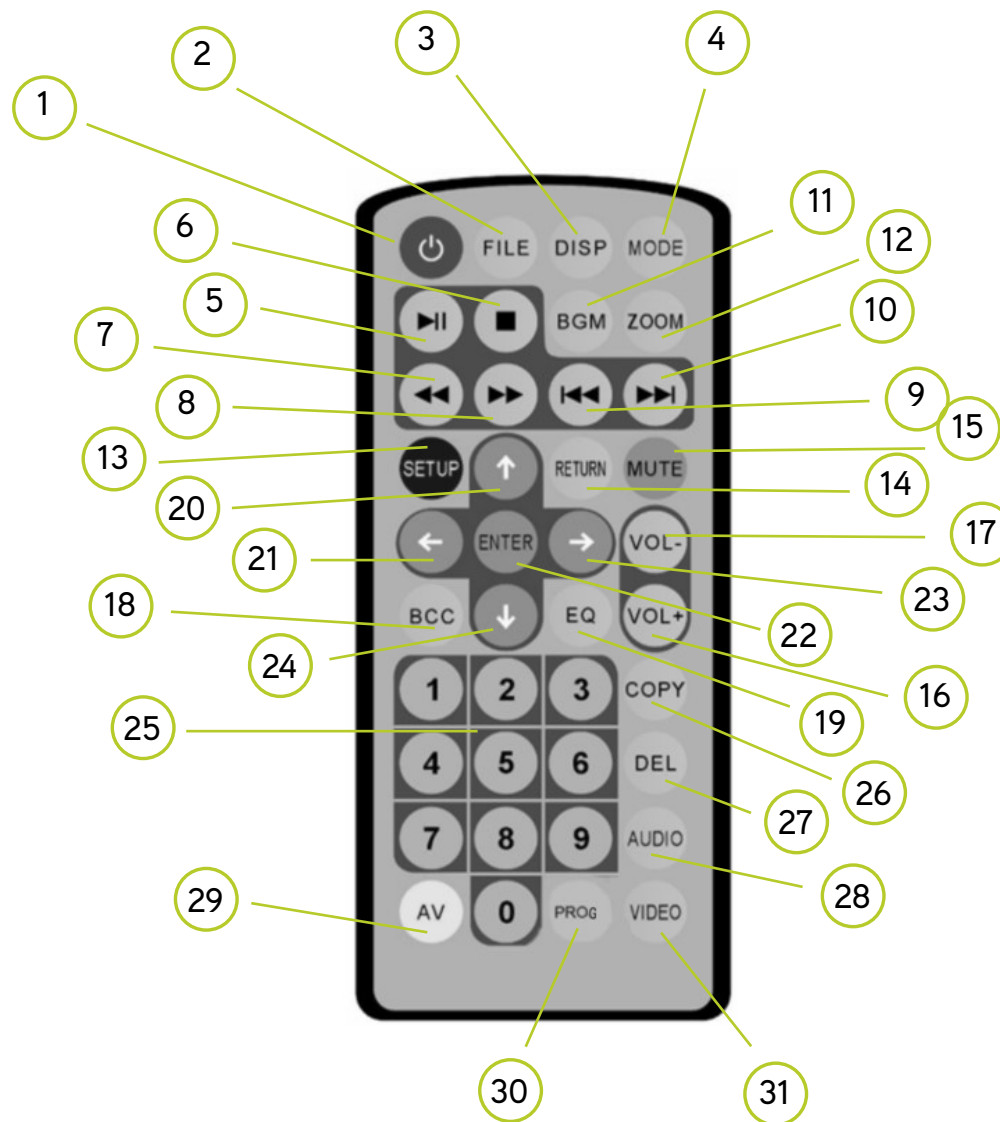


CARTO-C LCD - TRIPTYQUE LCD CARTON

> I.Attention:

- 1.Do not try to repair the device by yourself. Please contact our company or our agents if having any malfunctions.
- 2.Do not expose the device to moisture, dust, oil, smog, direct irradiation or other poor environments.
- 3.Do not use thinner or other chemical detergents but soft cloth to remove dust on the device.
- 4.Keep the device away from fairly hot or cold environments.
- 5.Avoid dropping or impacting the device.
- 6.It is common phenomenon of TFT LCD display technology if a few bright or black dots appear on the screen.

> II.Player Overview:

 - ① Remote Sensor
- ② Display Area
- ③ Power Input
- ④ Card Position

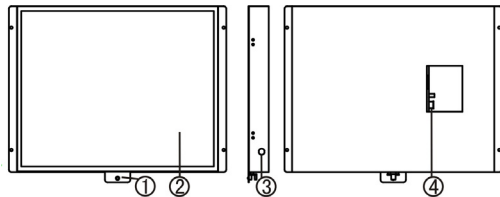

> III.Specifications:

- 1.Panel: 19" LG
- 2.Ratio: 4:3
- 3.Brightness: 300cd/m2
- 4.Contrast: 800:1
- 5.Viewable Angle: 75/75/70/70
- 6.Pixel: 1400xR.G.B.x900
- 7.Viewable Area: 410(H)x256(V)
- 8.Power: DC+12V/4A
- 9.Consumption: ≤48W
10. Operation Temperature: 0~60°

> IV.Accessory List:

1. 19" Unit x1
2. User Manual x2
3. Remote Control x1
4. Power Adapter x1
5. Power Cable x1

> V.Functional Description:

- 1.Automatically play the files in the memory card when power on.
2. File formats: MPEG1(VCD),MPEG2(DVD),MP4(AVI DIVX),MP3,JPG
- 3.Best Resolutions for pictures: 640 x 480.
- 4.Best Resolutions for videos:640 x480(720x480)
- 5.Compatible with CF/SD/USB.
- 6.USB automatic updates:
-- Cover all the original files(Create a text file named as «ZZZZ.FLG» with any content but should not be blank).

Detailed Instruction:

- a.Put the file into U disk.
- b.Create a text file named «ZZZZ.FLG» with any content.
- c.Insert U disk while displaying files in CF/SD card so the files in U disk can be copied to CF/SD card (Operation time is decided by file size.)
- d.Copy Finished (See Fig. 1): Pull out the U disk.



> VI. Common Faults And Causes:

Trouble	Cause	Solution
Trouble No image & No voice	1.Power supply disconnected. 2.Incompatible foarmat.	1.Check if the power supply connects correctly. 2. Update the format of playing files.
No image	1.Incompatible format. 2.Screen Damaged	1.Change the format of playing files. 2.Change screen
No voice	1.Incompatible format. 2.Speaker damaged	1. Update the format of playing files 2.Change the speaker.
Image and voice interrupted	The original files in memory card or USB are damaged.	Check and update playing files.
Remote control Failure:	1.Remote control damaged 2.Power off or insulation of the remote control. 3.The available remote distance is within 4 meters	1.Change the remote controle. 2.Change battery (check the power supply). 3.Adjust best distance between remote controle and the machine.

All above is for your reference, our company or agent will be responsible for detailed troubleshooting.